

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION OF PRODUCT. IMPORTANT INFORMATION IS PROVIDED THROUGHOUT THE INSTRUCTION SHEET THAT YOU SHOULD BE AWARE OF PRIOR TO INSTALLATION AND PRIOR TO USE OF THIS PRODUCT.

EACH TIME BEFORE OPERATING THE VEHICLE, CHECK AND SECURE ALL CLAMPS TO METAL LIP OF BED RAIL (NOTE: NEVER SECURE CLAMPS TO PLASTIC)

ALWAYS SECURE RED RETAINING STRAPS WHEN COVER IS IN OPENED POSITION

NEVER OPERATE VEHICLE WITH TONNEAU COVER CLAMPS LOOSE

IF THE VEHICLE HAS AN OVER-THE-RAIL BEDLINER – ONLY ALLOW A PROFESSIONAL, CERTIFIED INSTALLER TO PERFORM THE INITIAL INSTALLATION --- MODIFICATION TO THE BEDLINER IS REQUIRED

## INSTALLATION INSTRUCTIONS



PLACE TONNEAU COVER AT THE FRONT OF THE TRUCK BED WITH THE FRONT EDGE OF THE TONNEAU COVER EVEN WITH THE FRONT OF THE FRONT BED CAP. (NOTE: THE RED RETAINING STRAPS WILL BE FACING UPWARD)



REACH UNDER THE TONNEAU COVER AND ROTATE THE FRONT CLAMP FROM ITS STORAGE POSITION ON THE UNDERSIDE OF THE COVER DOWNWARD STARTING ON THE DRIVER SIDE OF THE TRUCK.



WITH THE CLAMP HANDLE PARALLEL TO THE BOTTOM OF THE TONNEAU COVER, SLIDE THE GROOVED SECTION OF THE CLAMP UNDER THE EDGE OF THE METAL INNER LIP OF THE TRUCK BED.  
*IF THE VEHICLE HAS PLASTIC BED RAIL CAPS- MAKE SURE THAT THE PLASTIC CAP DOES NOT EXTEND LOWER THAN THE METAL OF THE BED RAILS- IF IT DOES EXTEND BEYOND THE METAL RAIL TRIM THE PLASTIC CAP SO THAT IT IS ABOVE THE BOTTOM OF THE METAL RAIL.*



PULL HANDLE DOWN TO SECURE THE CLAMP. IF THE CLAMP IS LOOSE OR TOO TIGHT TO PULL DOWN, ADJUST THE CLAMP BY ROTATING (CLOCKWISE TO LOOSEN AND COUNTER-CLOCKWISE TO TIGHTEN) IT IS IMPORTANT THAT THE CLAMPS BE SECURE PRIOR TO OPERATION.




#5



#6

UNFASTEN THE RED RETAINING STRAPS (FOUR SNAPS) AND FOLD COVER REARWARD UNTIL IT COVERS THE TRUCK BED. LOWER TAILGATE. REPEAT THE STEPS ABOVE FOR THE TWO REAR CLAMPS AS YOU DID WITH THE FRONT CLAMPS.

### DRIVING WITH THE COVER OPEN

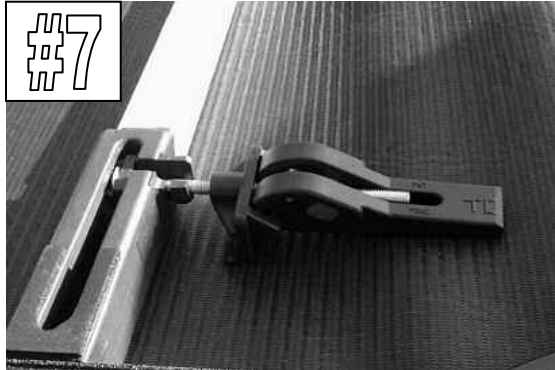

#7

FOLD COVER FORWARD  
PLACE THE CLAMPING HANDLE IN THE STORAGE POSITION. NOTE: FAILURE TO PUT HANDLE IN STORAGE POSITION MAY HARM VINYL AND WILL VOID WARRANTY.



#8

UNSNAP THE RED RETAINING STRAPS FROM THE BOW ON EACH SIDE OF THE TRUCK. SNAP TO THE FACTORY INSTALLED SNAPS ON THE FRONT RAIL OF THE TONNEAU COVER MAKING SURE THAT ALL FOUR SNAPS ARE SECURED. DRIVE WITH COVER OPEN

**WARNING: DAMAGE TO PERSONAL PROPERTY AND POSSIBLE PERSONAL INJURY MAY OCCUR IF:**

- **VEHICLE IS OPERATED WITHOUT BOTH RETAINING STRAPS FASTENED SECURELY WHEN COVER IS IN THE OPEN POSITION**
  - **IF THE CLAMPS ARE NOT FIRMLY SECURE**
  - **IF THE CLAMPS ARE FASTENED TO PLASTIC**

### LIMITED WARRANTY

Advantage Truck Accessories, Inc. warrants this product, to the original purchaser, to be free of defects in materials and workmanship, for the following period(s): seven (7) years on the vinyl material and limited lifetime for the balance of the components in the cover.

The warranty is limited to the repair or replacement of the product in whole or in part at the discretion of Advantage Truck Accessories. The warranty does not cover damages to the product caused by collision, improper use, commercial use, theft, vandalism, or loss of product. Warranty is void if vehicle is operated without all four clamps secured firmly or if the vehicle is operated with the cover in the open position without the retaining straps fastened.

Only use warm water or 303™ Protectant to clean the tonneau cover. Use of any other products will void this warranty.

Any claim for warranty coverage requires you to contact the reseller that you purchased the Torza Top from for resolution. This instruction/warranty form and your sales receipt are required when a warranty claim is requested.

#### Special Note for Installation of the Following Part Numbers:

91005  
91011  
91016  
93005  
93016

These vehicles do not have a return lip on the bed rail, a special bracket has been included to properly secure the unit to your vehicle. Most of these brackets will line up to factory holes in your truck bed. Line up brackets to holes and fasten securely. You are now ready to complete the installation.